


### INSTALLATION INSTRUCTIONS

1. Refer to submittal package prepared by ISOTECH Industries and locate each isolator based on model # and identification tag provided
2. Attach upper hanger rod to structure and secure it at the bottom of neoprene element. Leave at least  $\frac{1}{4}$ " gap between isolator housing and structure
3. Mount equipment, piping or ductwork to isolator using lower hanger rod
4. Follow star pattern sequence shown below and turn **leveling nut** to level equipment once all isolators are installed

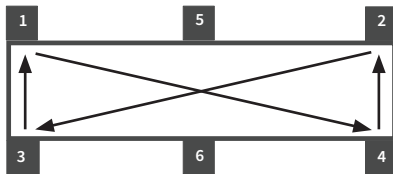

STAR PATTERN ORDER: 1, 4, 2, 3, & 1

