


INSTALLATION INSTRUCTIONS

1. Refer to submittal package prepared by ISOTECH Industries and locate each isolator based on model # and identification tag provided
2. Attach upper hanger rod to structure and secure it at the bottom of neoprene element. Leave at least 1/4" gap between isolator housing and structure
3. Mount equipment, piping or ductwork to isolator using lower hanger rod
4. Follow star pattern sequence shown below and turn **leveling nut** to level equipment once all isolators are installed



UPPER HANGER ROD
ATTACHMENT TO STRUCTURE

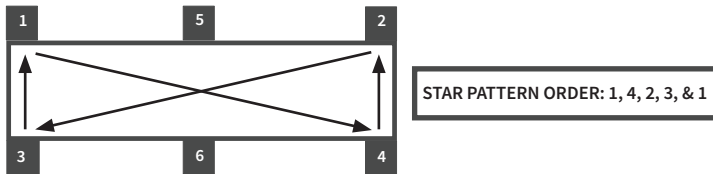