
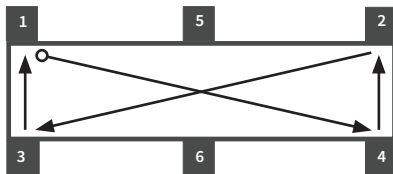



## IHA-1, 1" DEFLECTION ISOTECH SPRING HANGER INSTALLATION INSTRUCTIONS

1. Refer to submittal package prepared by ISOTECH Industries and locate each isolator based on model # and identification tag provided
2. Attach upper hanger rod to structure and secure it at the bottom of neoprene element. Leave at least ¼" gap between isolator housing and structure
3. Mount equipment, piping or ductwork to isolator using lower hanger rod
4. Follow star pattern sequence shown below and turn **leveling nut** to level equipment once all isolators are installed

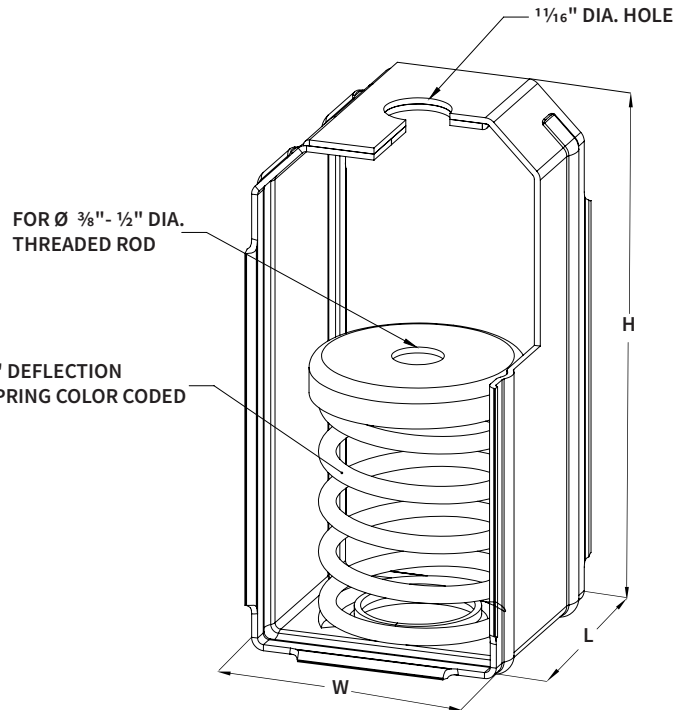

STAR PATTERN ORDER: 1, 4, 2, 3, & 1

PROJECT INFORMATION		EQUIPMENT INFORMATION		Canada location	USA Location	
Customer:		Type:		35 Silton Road Woodbridge ON L4L 7Z8 CANADA T: 905-856-5001	3021 E Coronado St. Anaheim, CA., 92806 U.S.A T: 949-788-2930	
Project:		Qty Required:				
Drawing No:		Operating Weight:				
Notes:						

COPYRIGHT: UNLESS OTHERWISE AGREED OR STATED IN WRITING, ALL INFORMATION AND DESIGNS DISPLAYED WITHIN ARE ALL THE PROPERTY OF ISOTECH INDUSTRIES INC. AND MAY NOT BE DUPLICATED OR DISTRIBUTED OUTSIDE OF ISOTECH INDUSTRIES INC. WITH THE EXCEPTION OF AUTHORIZED PERSONS WITH LEGITIMATE NEED TO KNOW WHO BY THE USE OF THIS RECOGNIZE ISOTECH INDUSTRIES INC. OWNERSHIP AND WILL COMPLY TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.