



IHCE-2, 2" DEFLECTION ISOTECH SPRING HANGER INSTALLATION INSTRUCTIONS

1. Refer to submittal package prepared by ISOTECH Industries and locate each isolator based on model # and identification tag provided
2. Attach upper hanger rod to structure and secure it at the bottom of neoprene element. Leave at least 1/4" gap between isolator housing and structure
3. Mount equipment, piping or ductwork to isolator using lower hanger rod
4. Follow star pattern sequence shown below and turn leveling nut to level equipment once all isolators are installed

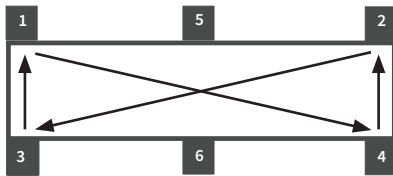

STAR PATTERN ORDER: 1, 4, 2, 3, & 1

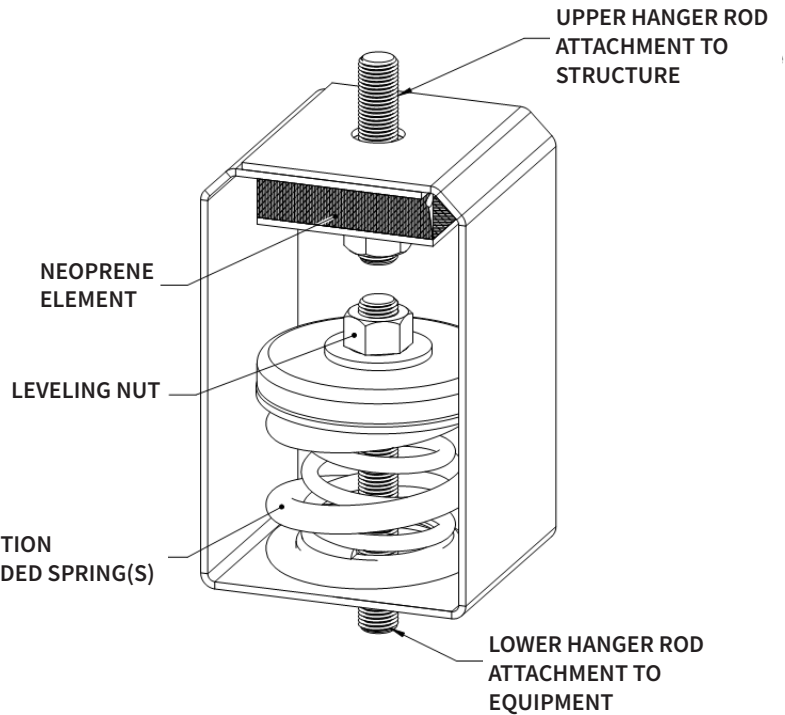

PROJECT INFORMATION		EQUIPMENT INFORMATION		Canada location	USA Location
Customer:		Type:		35 Silton Road Woodbridge ON L4L 7Z8 CANADA T: 905-856-5001	3021 E Coronado St. Anaheim, CA., 92806 U.S.A T: 949-788-2930 Tool free : 1-888-831-3311 www.isotechindustries.com
Project:		Qty Required:			
Drawing No:		Operating Weight:			
Notes:					

