IHSE-1 ISOTECH SPRING HANGER INSTALLATION INSTRUCTIONS

File No.: ISOCS-IHSE-1-150-200 Date: 22/12/15

INSTALLATION INSTRUCTIONS

1.Refer to submittal package prepared by ISOTECH Industries and locate each isolator based on model # and identification tag provided

2.Attach upper hanger rod to structure and secure it at the bottom of neoprene element. Leave at least ¼" gap between isolator housing and structure

3.Mount equipment, piping or ductwork to isolator using lower hanger rod

4.Follow star pattern sequence shown below and turn leveling nut to level equipment once all isolators are installed

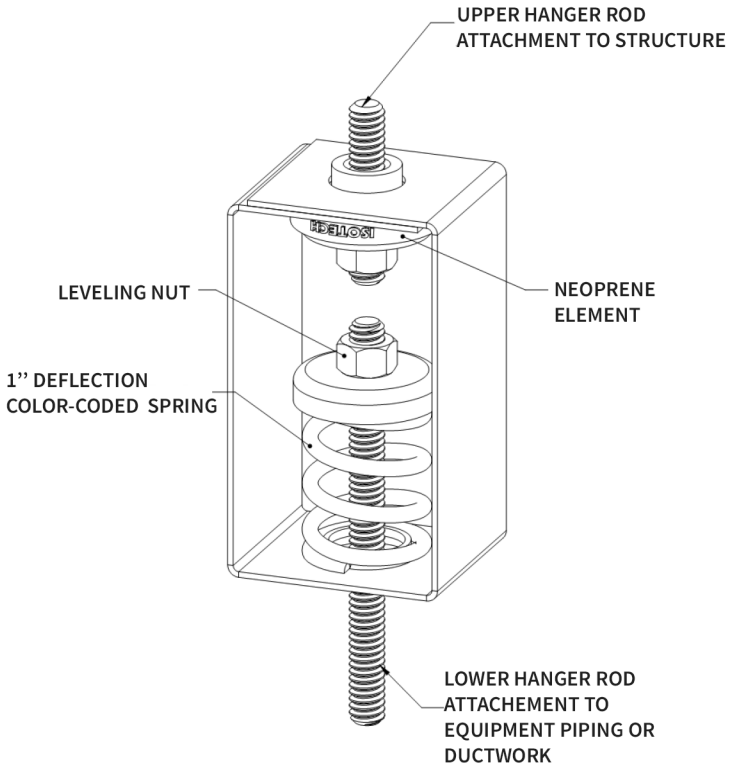

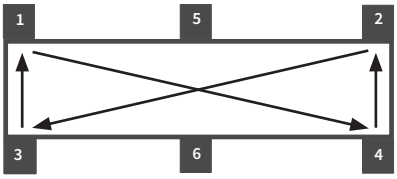

STAR PATTERN ORDER: 1, 4, 2, 3, & 1

PROJECT INFORMATION		EQUIPMENT INFORMATION	
Customer:		Type:	
Project:		Qty Required:	
Drawing No:		Operating Weight:	
Notes:			

Canada location
35 Silton Road
Woodbridge ON
L4L 7Z8 CANADA
T: 905-856-5001

USA Location
3021 E Coronado St.
Anaheim, CA.,92806
U.S.A
T: 949-788-2930

Tool free : 1-888-831-3311
www.isotechindustries.com

COPYRIGHT: UNLESS OTHERWISE AGREED OR STATED IN WRITING, ALL INFORMATION AND DESIGNS DISPLAYED WITHIN ARE ALL THE PROPERTY OF ISOTECH INDUSTRIES INC. AND MAY NOT BE DUPLICATED OR DISTRIBUTED OUTSIDE OF ISOTECH INDUSTRIES INC. WITH THE EXCEPTION OF AUTHORIZED PERSONS WITH LEGITIMATE NEED TO KNOW WHO BY THE USE OF THIS RECOGNIZE ISOTECH INDUSTRIES INC. OWNERSHIP AND WILL COMPLY TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.