
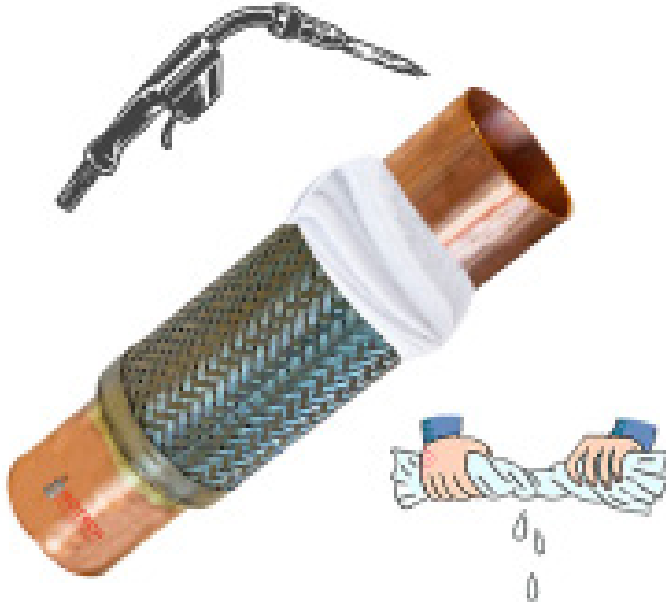


General Installation Instructions:

1. Clean each end using steel wool and brushes. Brazing and soldering flux must be removed immediately after installation. Chlorides will cause premature failure of bronze vibration eliminators.
2. Wrap base of fitting and 1 ½" down the braid with a wet cloth to dissipate heat during sweating of the assembly to system.
3. Direct all heat away from the base of fitting and hose/braid. Avoid any open flame contact to this area as well.
4. Use silver solder to connect the assembly to the system. DO NOT use brazing rod or other higher temperature methods.
5. Remove wet cloth and all other installation products after assembly is installed.

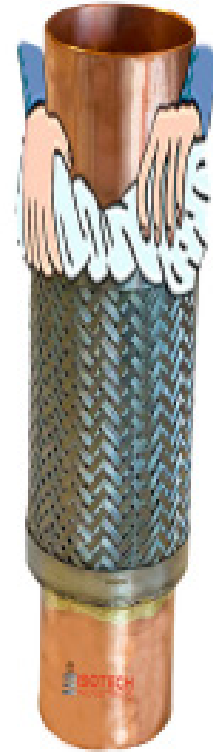

| PROJECT INFORMATION | | EQUIPMENT INFORMATION | | Canada location | USA Location |
|---------------------|--|-----------------------|--|--|---|
| Customer: | | Type: | | 35 Silton Road Woodbridge ON L4L 7Z8 CANADA T: 905-856-5001 | 3021 E Coronado St. Anaheim, CA.,92806 U.S.A T: 949-788-2930 |
| Project: | | Qty Required: | | | |
| Drawing No: | | Operating Weight: | | | |
| Notes: | | | | Tool free : 1-888-831-3311 www.isotechindustries.com | |

COPYRIGHT: UNLESS OTHERWISE AGREED OR STATED IN WRITING, ALL INFORMATION AND DESIGNS DISPLAYED WITHIN ARE ALL THE PROPERTY OF ISOTECH INDUSTRIES INC. AND MAY NOT BE DUPLICATED OR DISTRIBUTED OUTSIDE OF ISOTECH INDUSTRIES INC. WITH THE EXCEPTION OF AUTHORIZED PERSONS WITH LEGITIMATE NEED TO KNOW WHO BY THE USE OF THIS RECOGNIZE ISOTECH INDUSTRIES INC. OWNERSHIP AND WILL COMPLY TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.